



Instructions for Re-Syncing Keyboard and RF or Bluetooth Dongle

Thank you for visiting our site. If your keyboard has unexpectedly stopped communicating with your dongle or there are functions and features of the keyboard that are not working as normal, please follow the steps below to re-sync your keyboard and dongle.

1. Remove the dongle, power on your keyboard, and press key Fn + RF simultaneously until the LED flash
2. Release the two keys, and insert the USB dongle into your computer
3. Place your keyboard near the USB dongle, when you see led go out, that means they pair successfully.

If the problem persists, please contact our support group via the “contact us” link on our website.